

Ecobox 2




Pilot wire version

Emitter

Receiver

ECOBX 2 – reduction of annual consumption about 25% !!!

Positioning

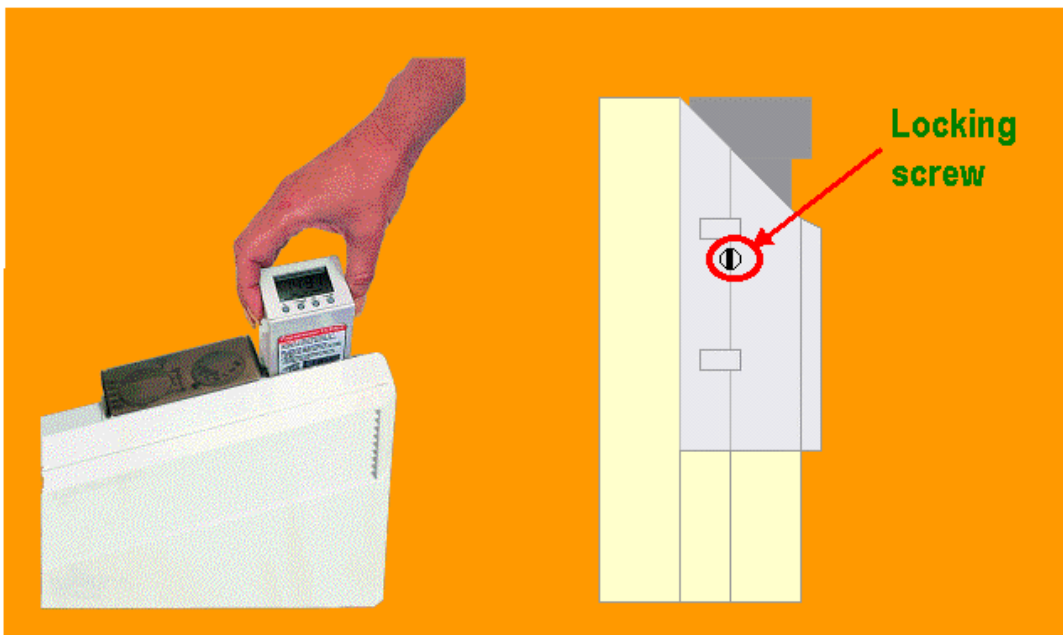




Choice of the programs


BETWEEN

7 Free programs (one by day of the week), each of them can be modified according to te needs

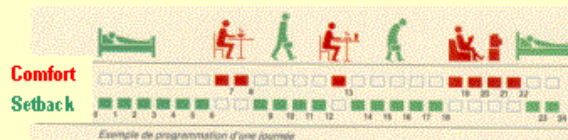

OR


One of the **7 Recorded programs** can be chosen for each day of the week

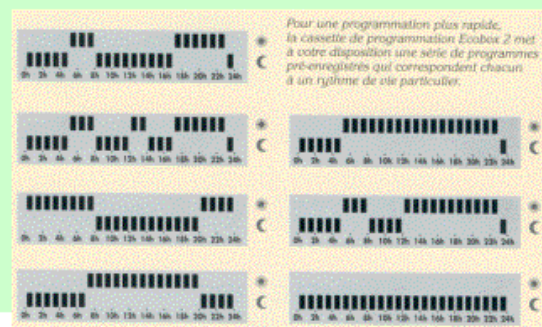

ECOBIX 2 – program.modes

- Mode „**COMFORT**“
When set at COMFORT, the heaters control your room temperature at your comfort setting, which you select by adjusting the temperature control knob directly on the heaters. These periods correspond to times when you are present.
- Mode „**ECO- Set back**“
When set at ECO, the heaters control your room temperature at 3.5°C lower than your comfort setting. These periods correspond to the times when you are not there or when you are sleeping.
- Program „**FREEZE GUARD**“
When set at FREEZE GUARD, the heaters control your room temperature at 7°C. This setting is used for extended periods of absence or for unoccupied rooms.

Programmation Cassette

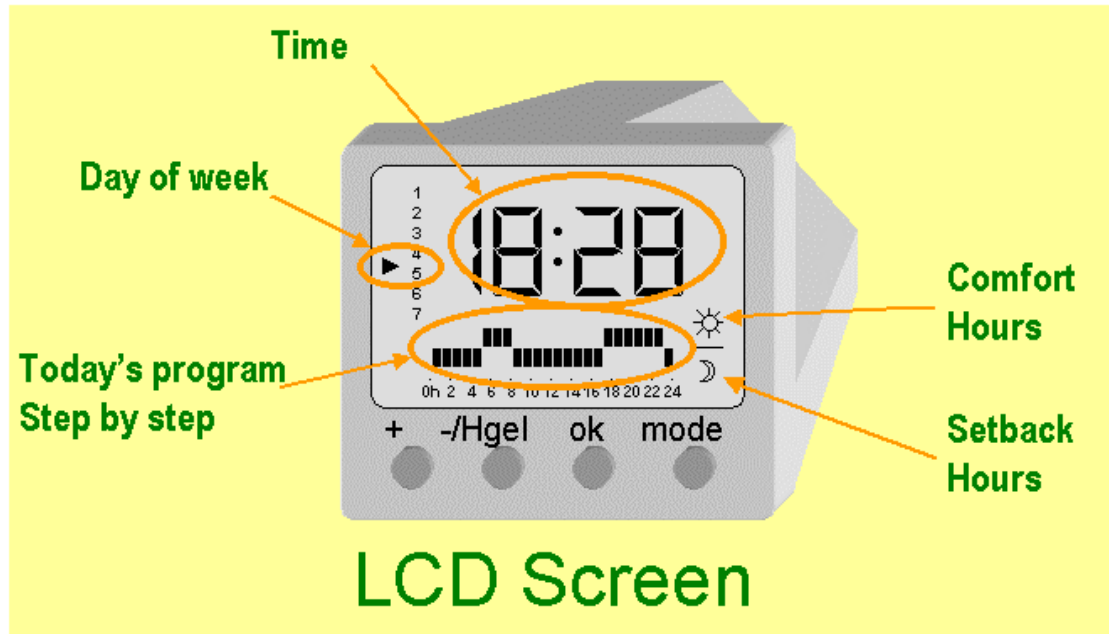


Ecobox 2 Pilot wire




**1 programming
cassette by zone**


Pilot wire principle

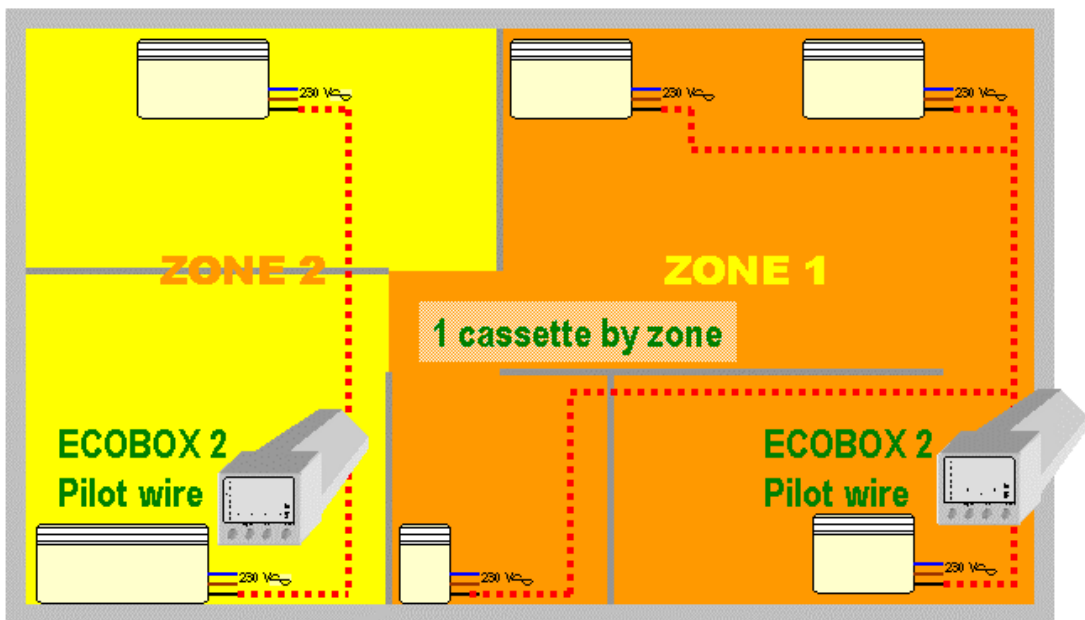


Possibility of Pilot wires connection

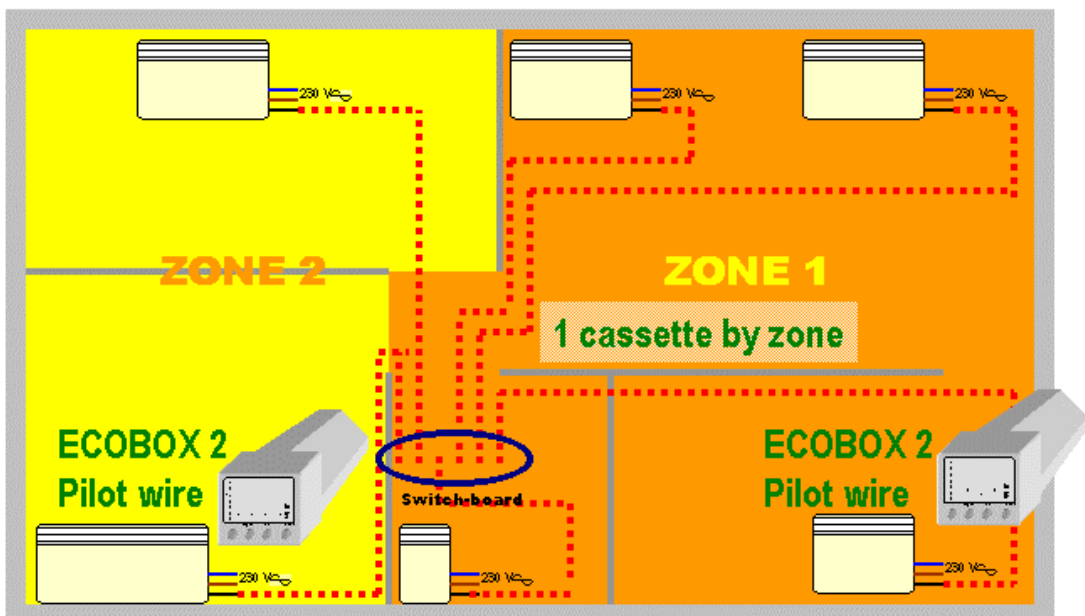

Connection of pilot wires in the main Switch-board

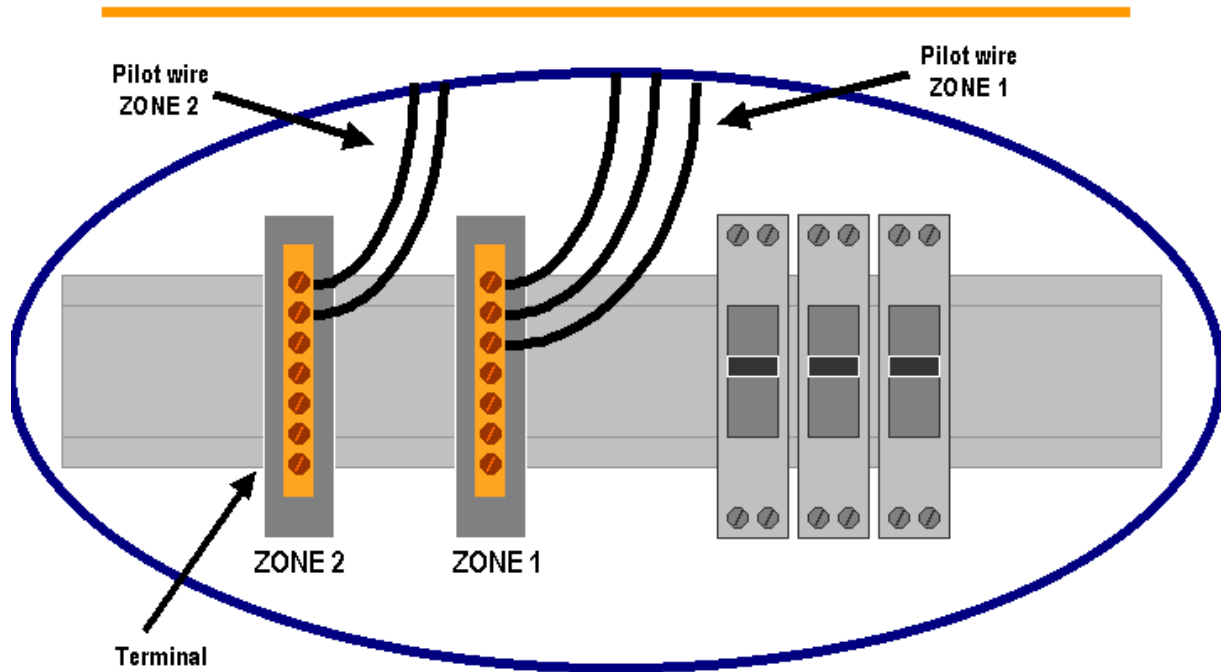

Change of pilot wire from control of zone1 to zone2

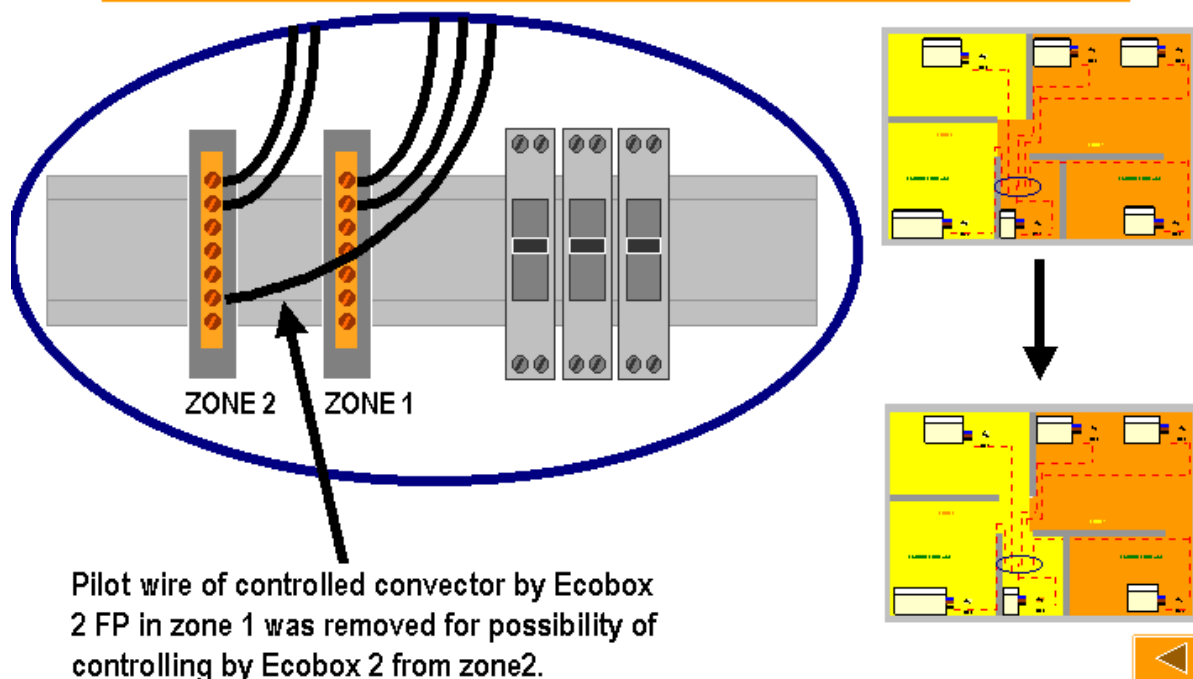


Mains signalling


Transmitter



Receiver

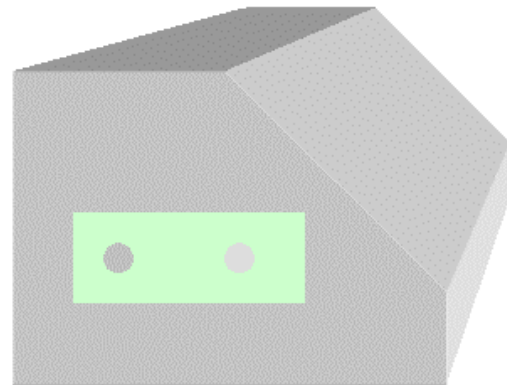


Mains signalling principle

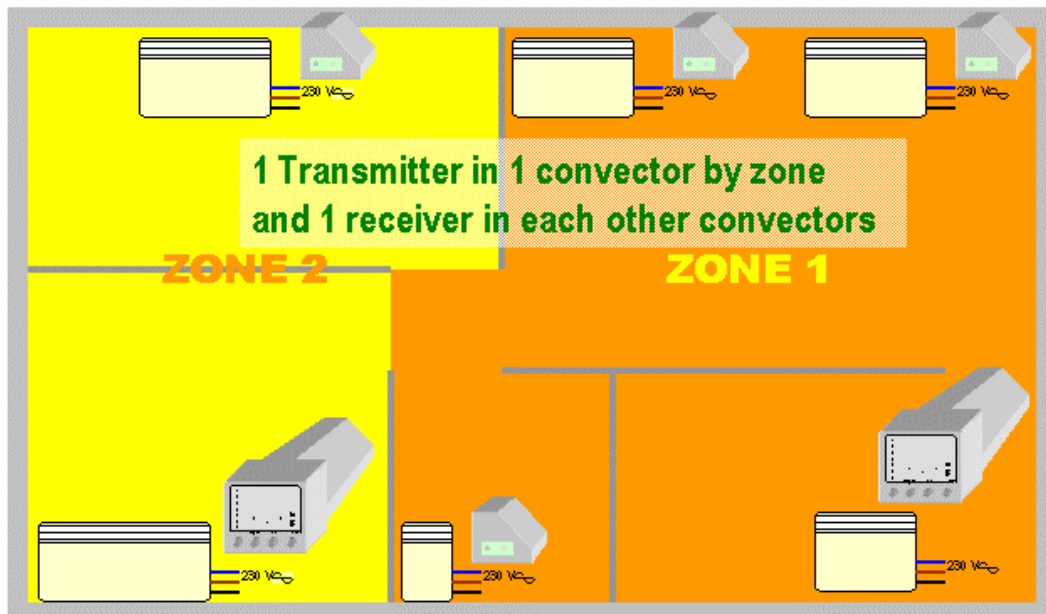

Carrier current



**1 Transmitter in 1
convector by zone**

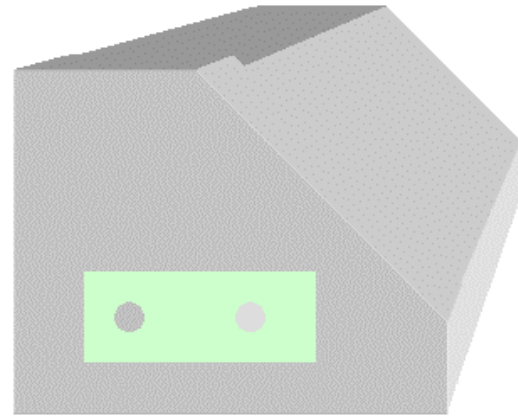

**1 receiver in each
other convectors**

Setting the clock right







- Press the button « mode » during 2 seconds
- Change the hours pressing the buttons « + » or « - » and afterward pressing the button « OK »
- Change the minutes pressing the buttons « + » or « - » and afterward pressing the button « OK »
- Change the day pressing the buttons « + » or « - » and afterward pressing the button « OK »



Type of combined regulation in 2 zones:

Ecobox 2 Transmitter-Receiver ; Ecobox 2 Pilot wire

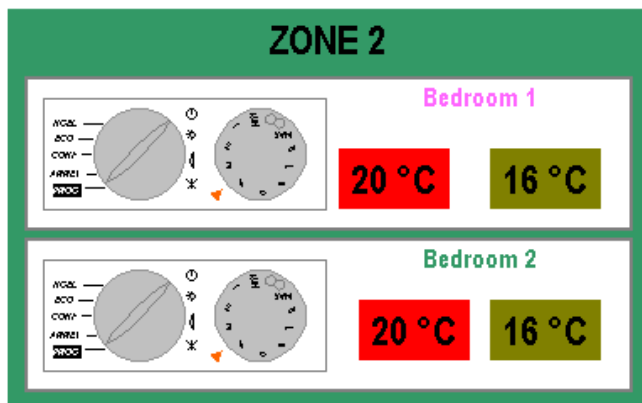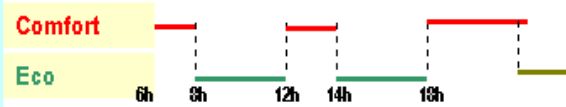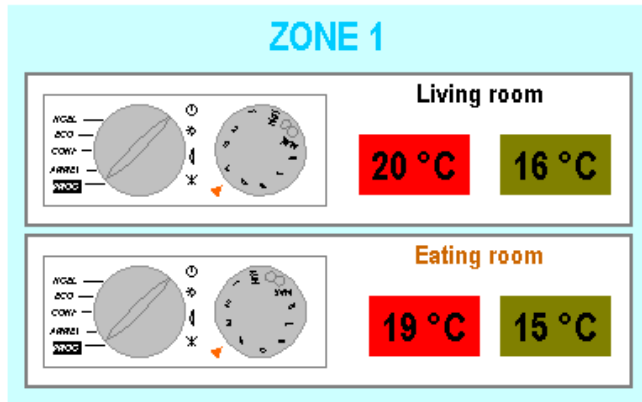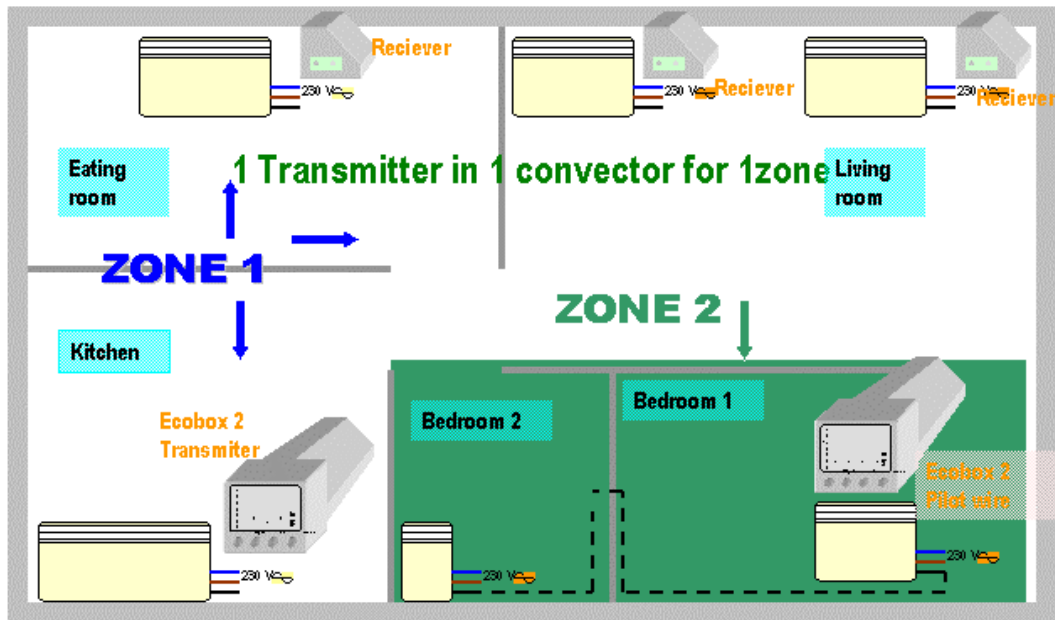





FENIX 

Type of convectors with installed box for
ECOBOX 2 (both version)

ELITE 3D

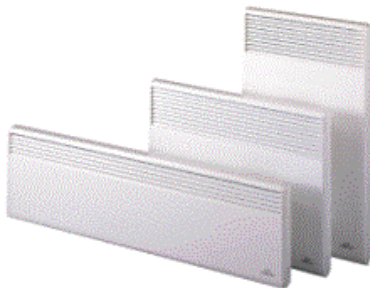


PRESTANCE 2

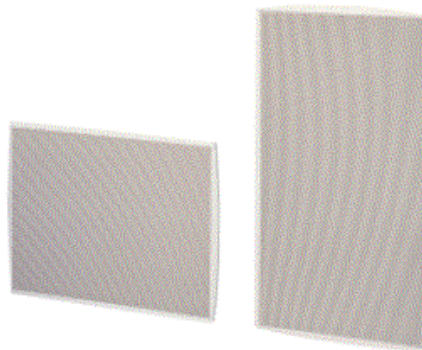

FENIX 

Type of convectors, which is possible to control by
programming unit Ecobox 2 – Pilot wire version

ELITE 3D

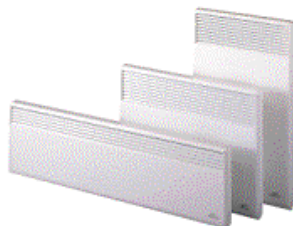

ECOFLEX EL



PRESTANCE 2

